



Steeda Intake Tube Upgrade


2005+ Mustang GT Cold Air Intake

Installation Instructions

Part # 555-3130, 555-3130-B, 555-3131, 555-3138

Steeda's all new Intake Tube was designed specifically for our very popular 2005+ Mustang CAI. The intake tube is molded out of high quality heat resistant plastic, with a smooth inside surface to increase the velocity of incoming air (555-3130 & 555-3131). The Carbon Fiber version is light weight and looks great too (555-3138). We have seen gains up to of 8 horsepower and 8 ftlbs of torque to the tires throughout the entire power-band!!! No tune is needed for this Upgrade if you are already running a Steeda Tune. Included in the kit is 4 ply silicone hose and stainless steel hose clamps with instruction. Note: Also fits Ford Racing cold air intake.

1. First step is to remove the factory vacuum line from the stock intake tube. You will need a flat head screwdriver to remove the factory hose clamp. Pry it apart like in picture # 1. Then pull the plastic reducer out of the rubber tube gently.
2. Once the vacuum line is removed, remove the entire factory intake tube by loosening the hose clamp at the throttle body end and also by the mass air meter. Remove the intake and discard.
3. Install the long silicone hose on the mass air end of the Steeda plastic intake tube. The shorter piece will be installed at the throttle body end. Note that there are two different large size hose clamps in this kit. Size # 72 is for the TB end and size 64 for the mass air meter end. Install the intake tube and tighten all hose clamps once it's aligned properly. Do not over tighten the hose clamps, you can damage the tube!
4. Last, install the short piece of 5/8" hose between the nipple and the factory vacuum reducer, picture # 2. Use the two included small hose clamps to secure it in place. Installation is now complete.

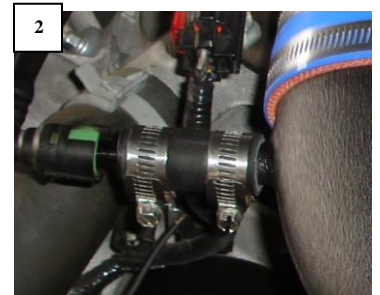

Thank You for choosing STEEDA. Any questions and/or comments on these instructions

Please contact us at (954) 960-0774 or e-mail us at gofast@steeda.com

Warning: Not approved for sale in California or states that require a California E.O. #. This part has been designed and is intended for off-road application only. Installation of this part on a vehicle that is driven on public roads may violate U.S. and Canadian laws and regulations.

Note: Federal and several state and provincial laws prohibit the removal, modification or rendering inoperative of any part that affects emissions or safety on motor vehicles used on public streets or highways. Steeda Autosports assumes no liability for any violations arising out of any federal, state or provincial emissions or safety requirements on motor vehicles arising out of the customer's modifications and/or use of Steeda products. It is the responsibility of the customer to determine if their modified vehicle complies with applicable laws.

This limited warranty is the only express warranty applicable to Steeda Autosports products. Other rights may arise or vary from state to state in the United States. Steeda is not responsible for any time for which you may lose the use of your vehicle, any inconvenience you might be caused, the loss of your transportation or any part thereof, or any other incidental or consequential damages you may have.